

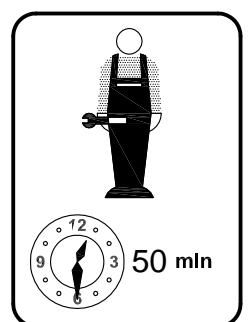








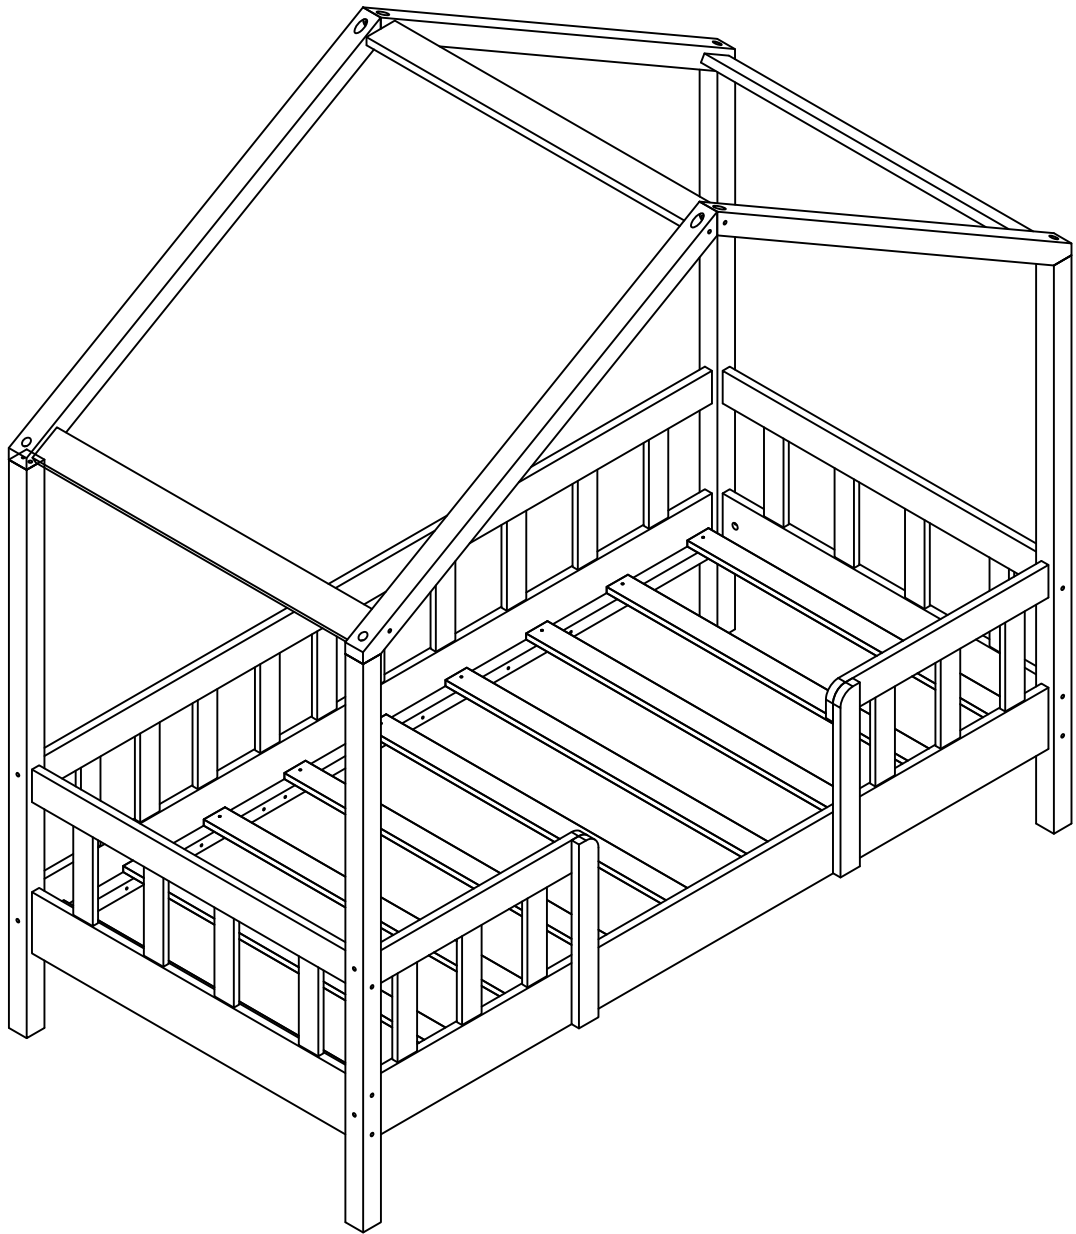


70x140cm Bed

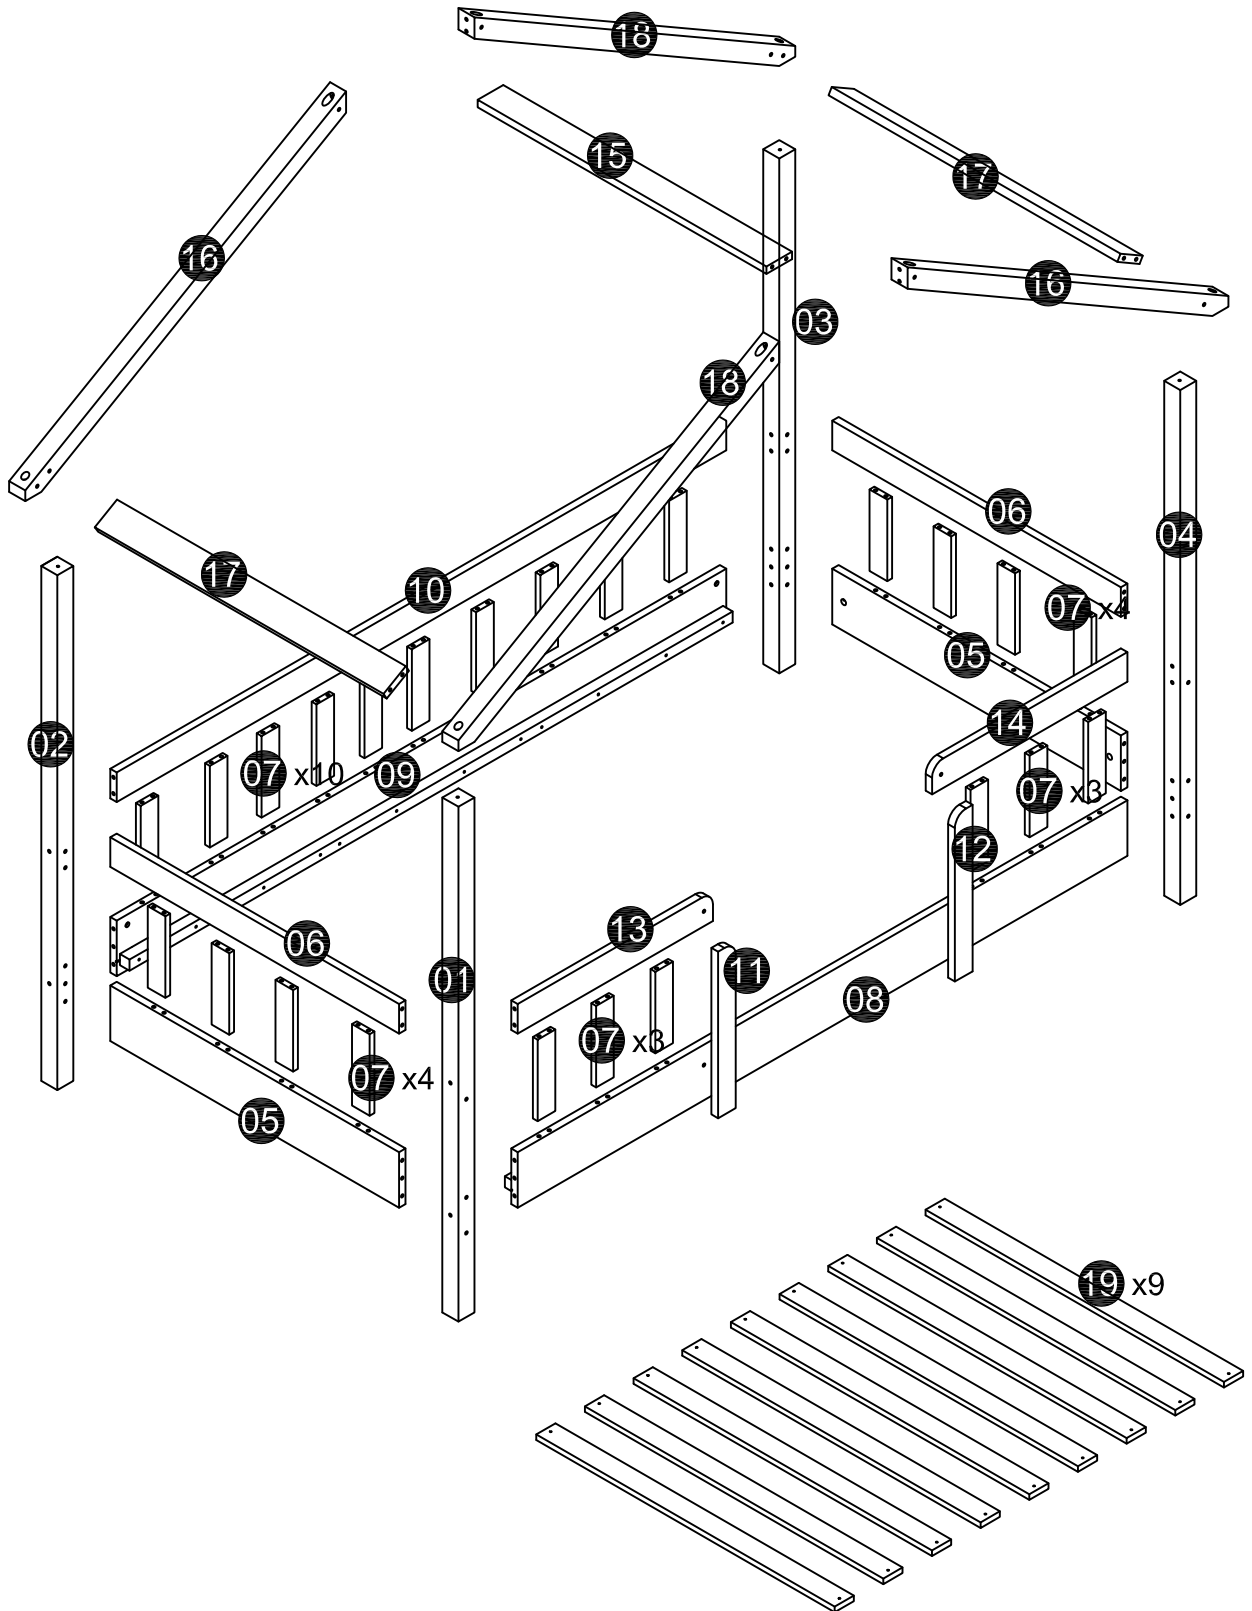



EXPLODED VIEW




HARDWARE

<p>A x12</p>  <p>M6 x90mm</p>	<p>B x12</p> 	<p>C x16</p>  <p>∅6 x90mm</p>	<p>D x122</p>  <p>∅8 x30mm</p>	<p>E x6</p>  <p>M6 x30mm</p>
<p>F x2</p> 	<p>G x4</p>  <p>∅6 x80mm</p>	<p>H x1</p> 	<p>I x18</p>  <p>∅4 x30mm</p>	


TOOLS




Ruler - Use this ruler to help correctly identify the screws






01

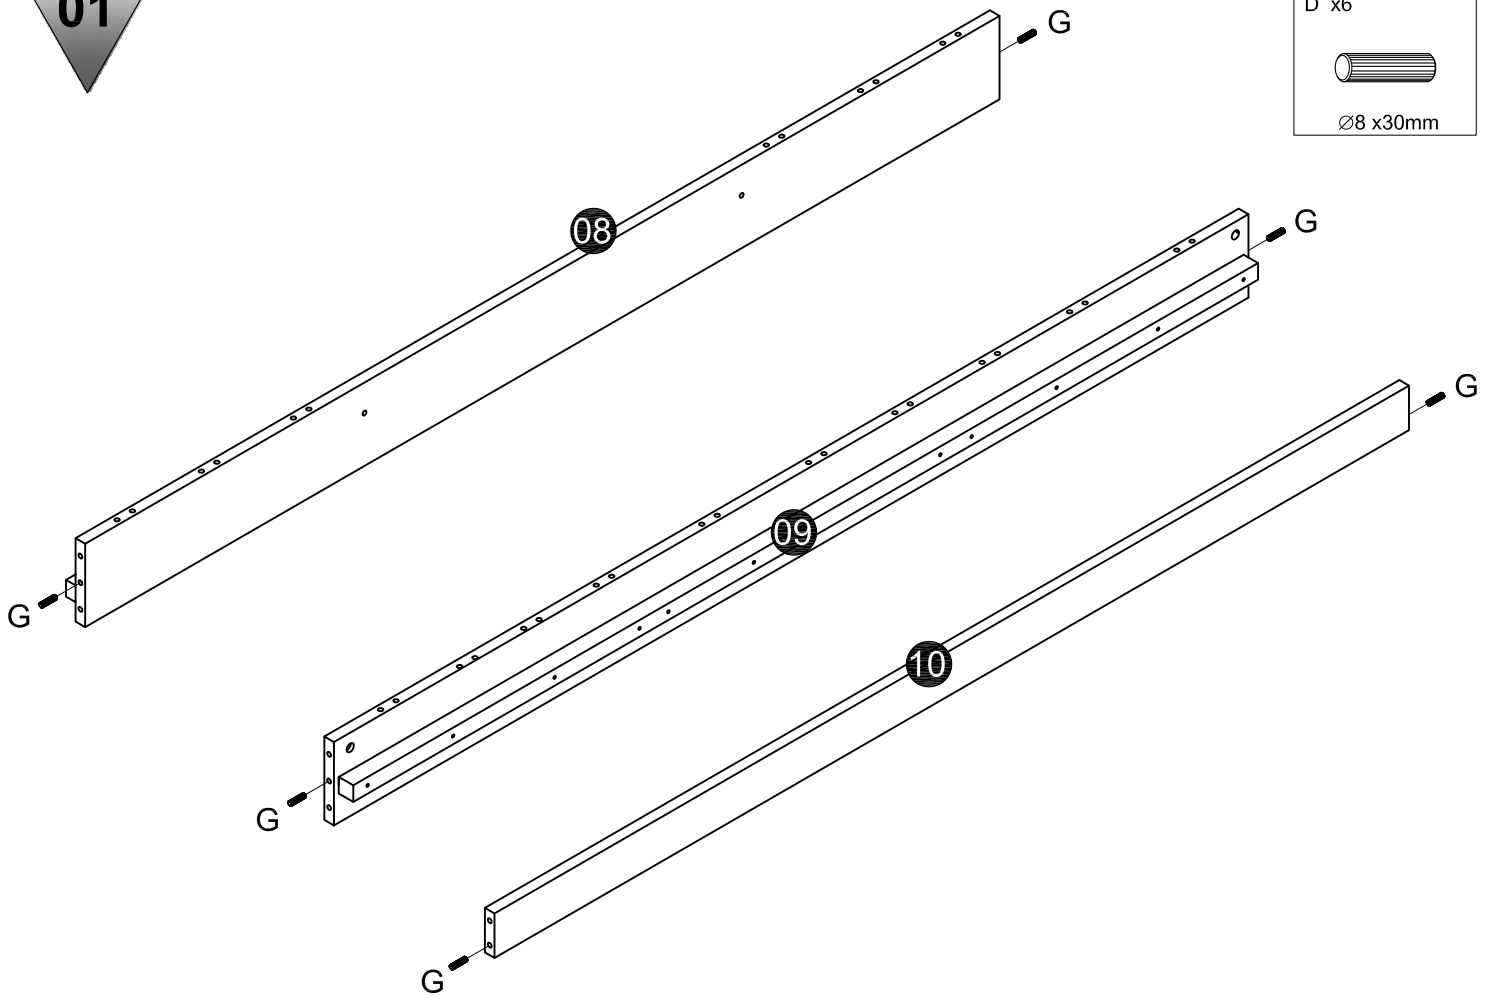




02

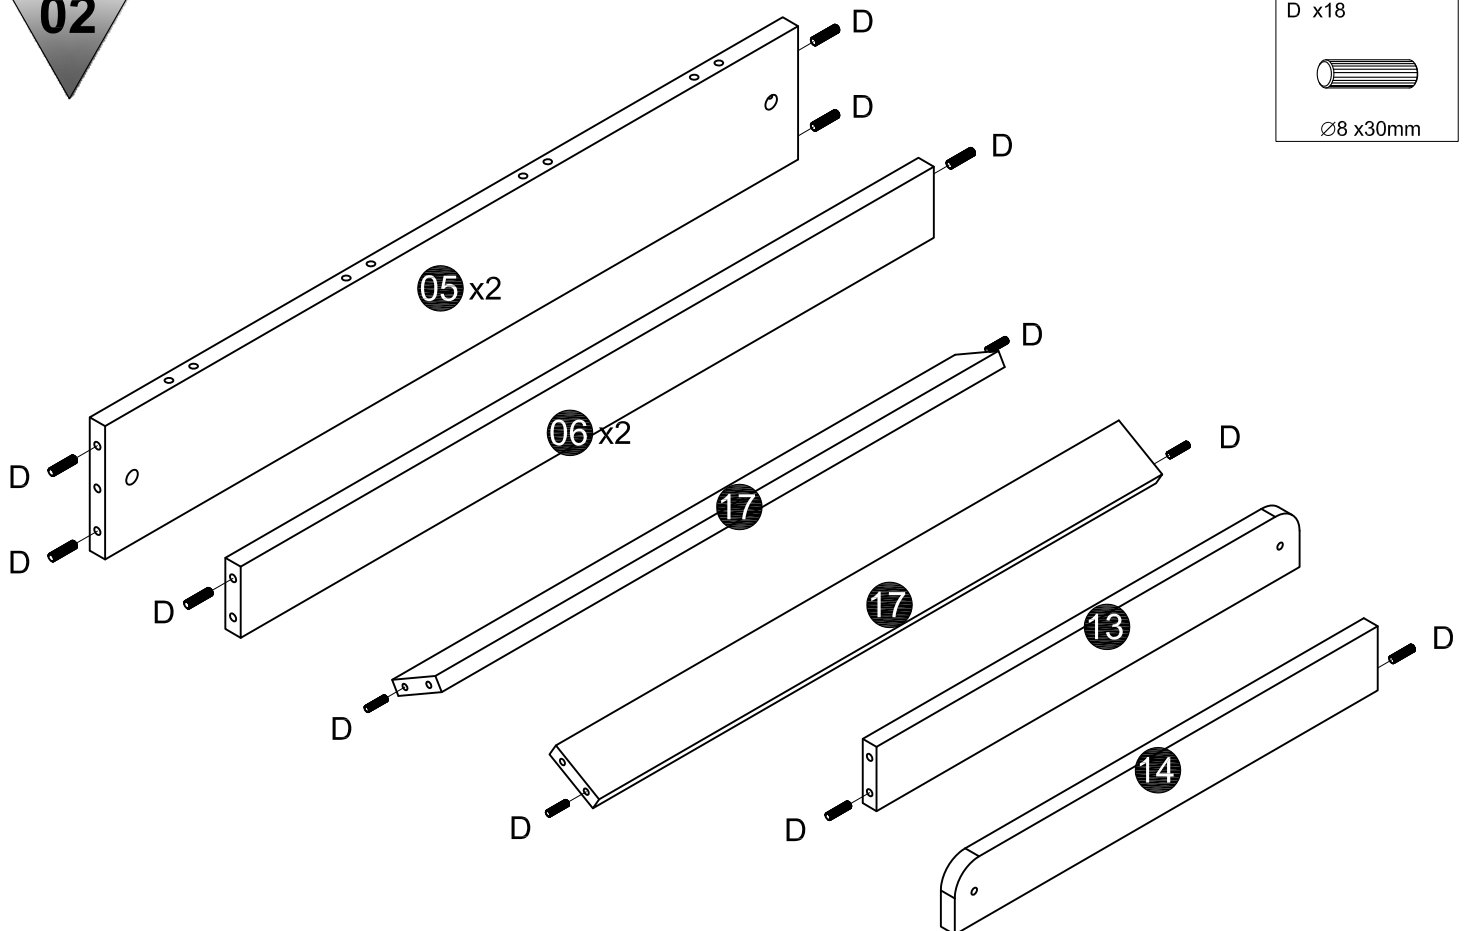

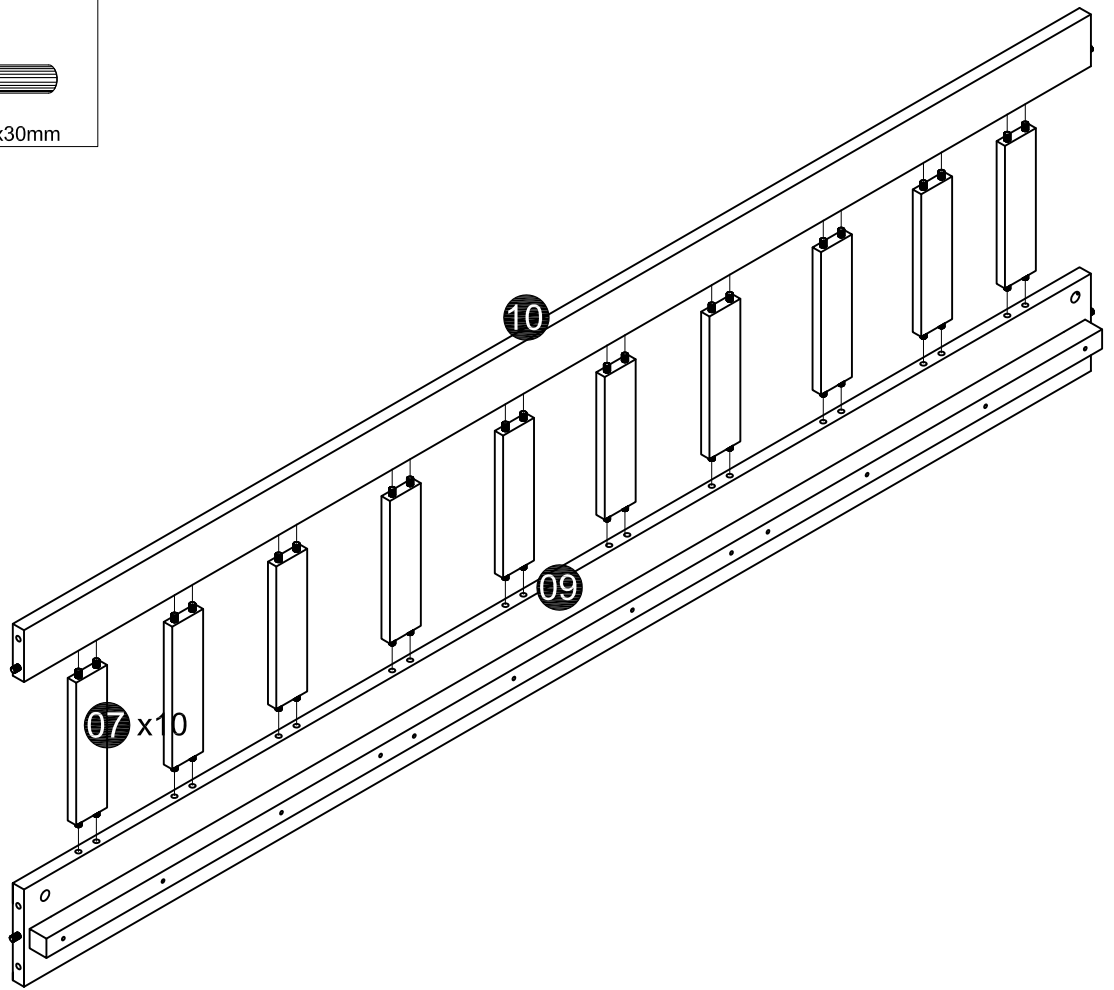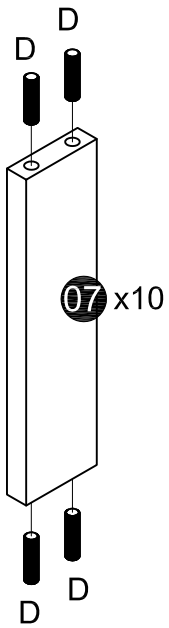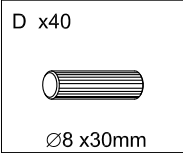

03

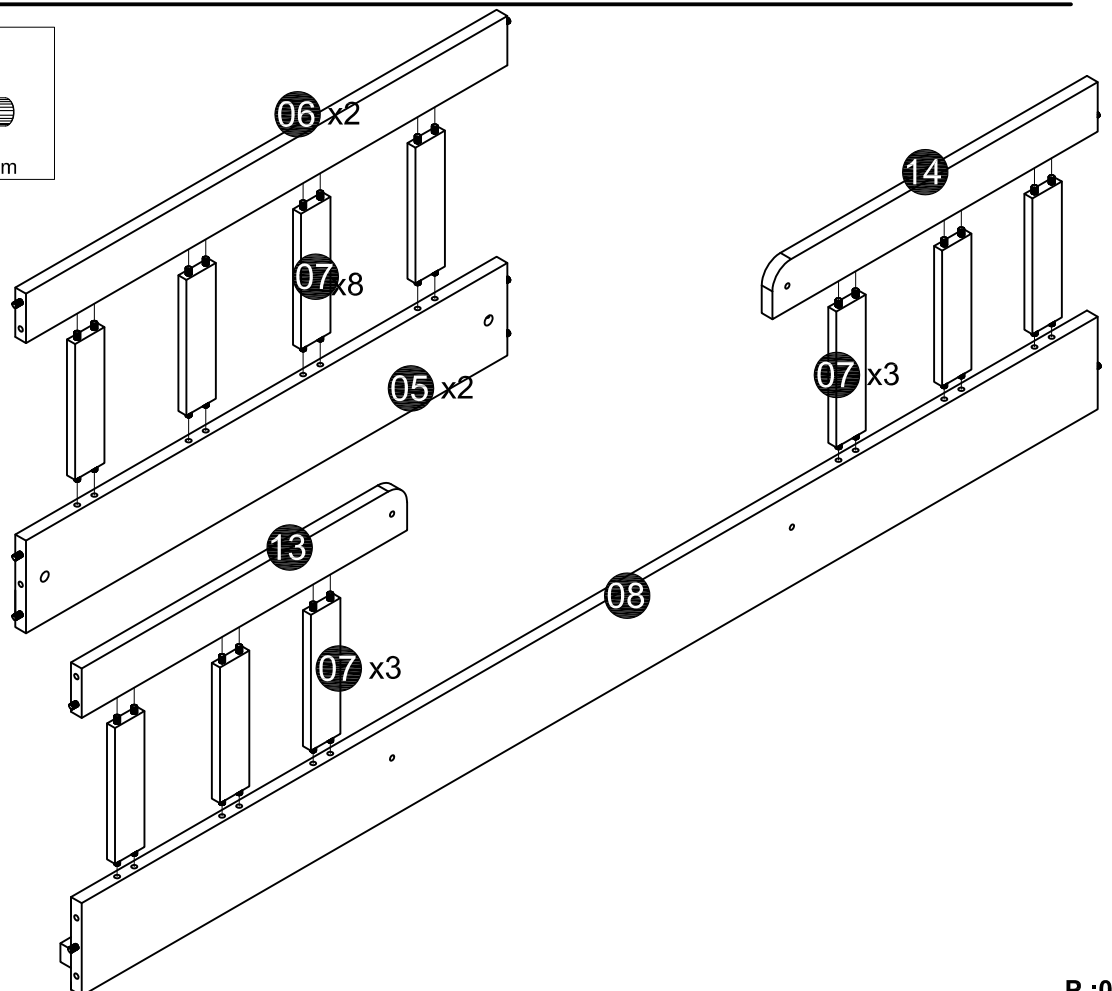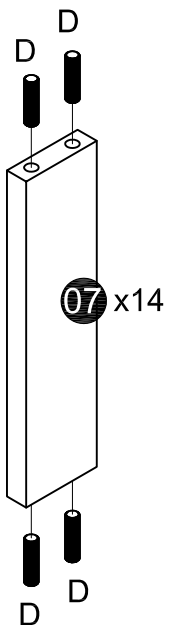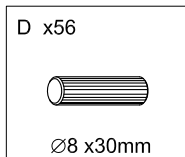


04








05

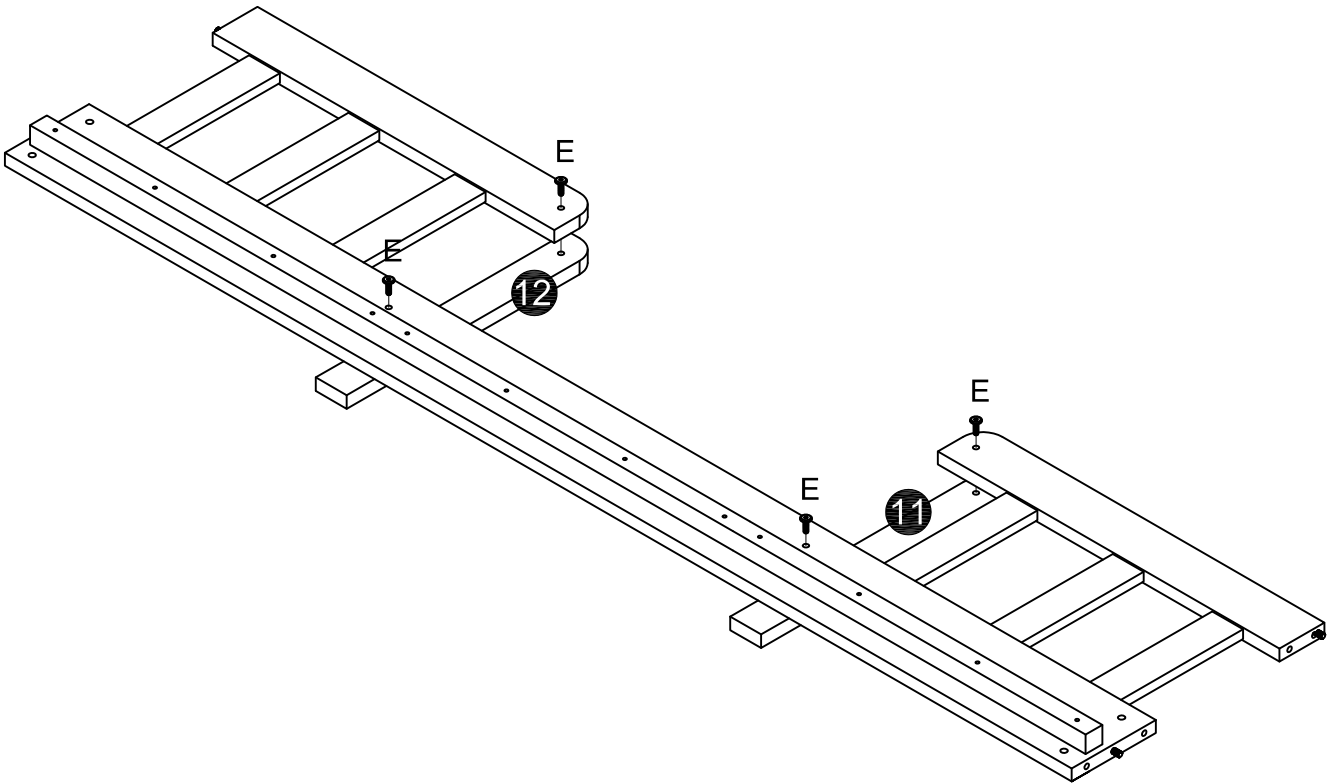E x4	H x1
	
M6 x30mm	








06

H x1	A x2	B x2	C x2
			
	M6 x90mm		Ø6 x90mm


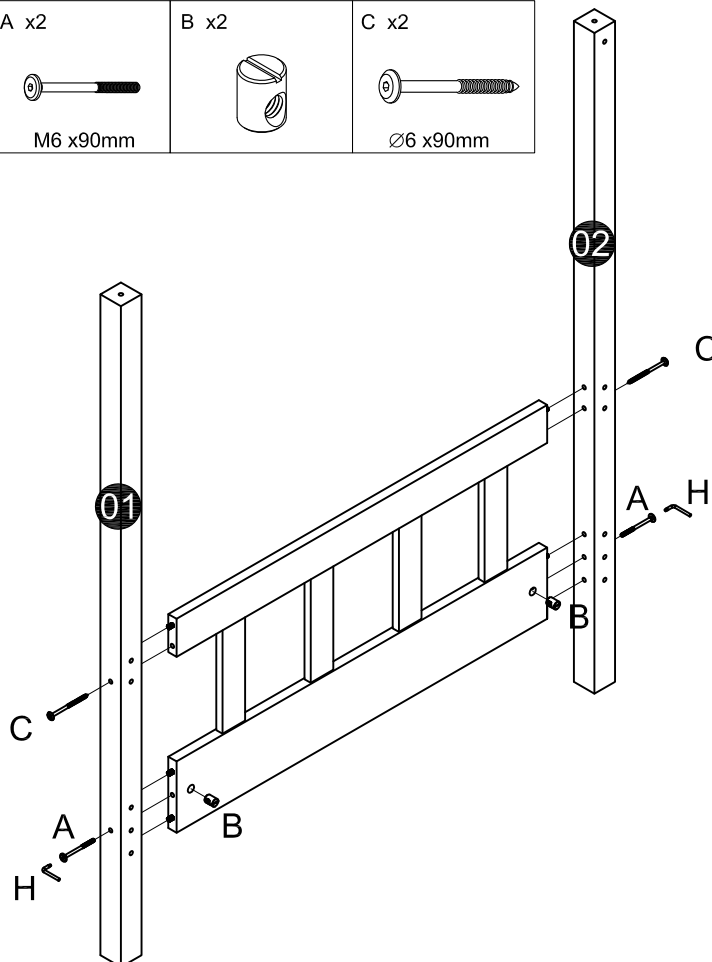






07

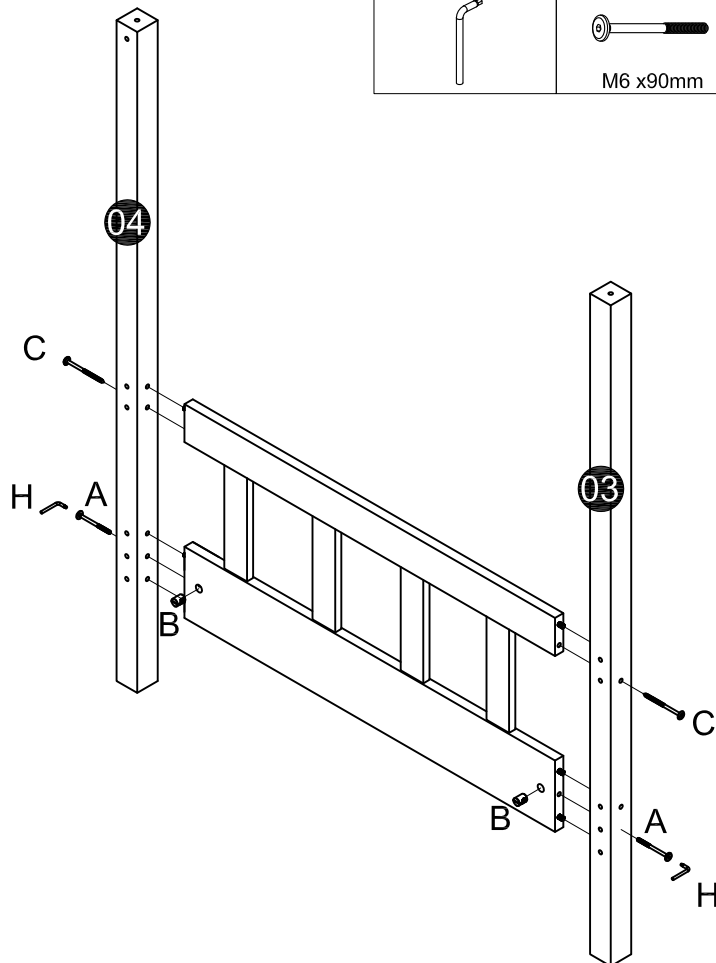H x1 	A x2  M6 x90mm	B x2 	C x2  Ø6 x90mm
---	---	---	---

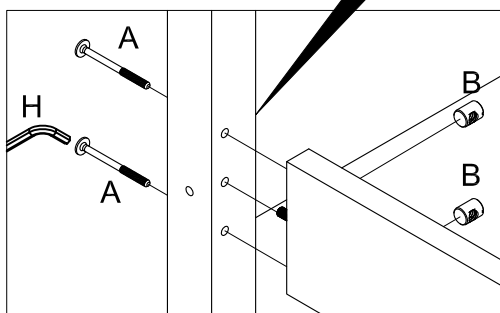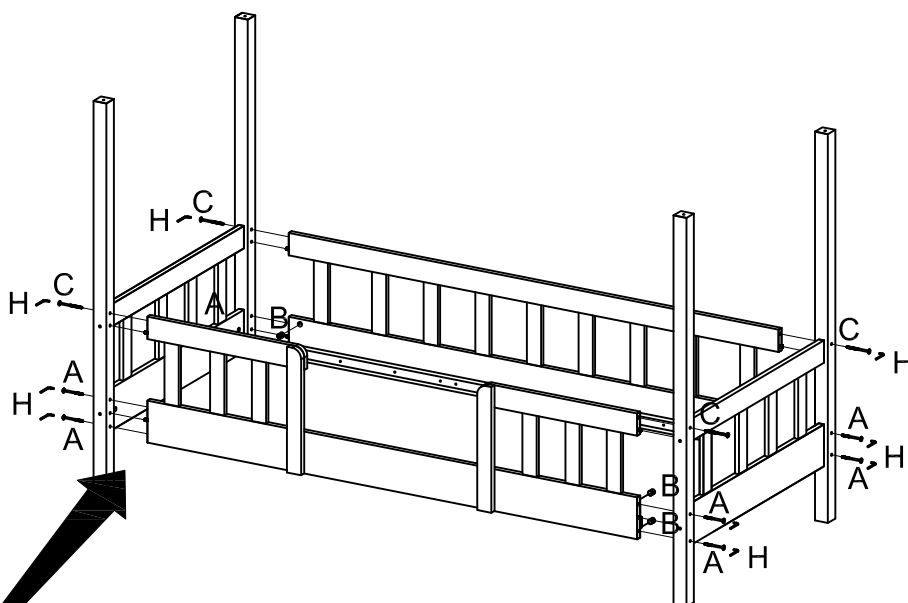

08




C x8  Ø6 x90mm	A x8  M6 x90mm	B x8 	H x1 
---	---	---	---

09

I x18



Ø4 x30mm

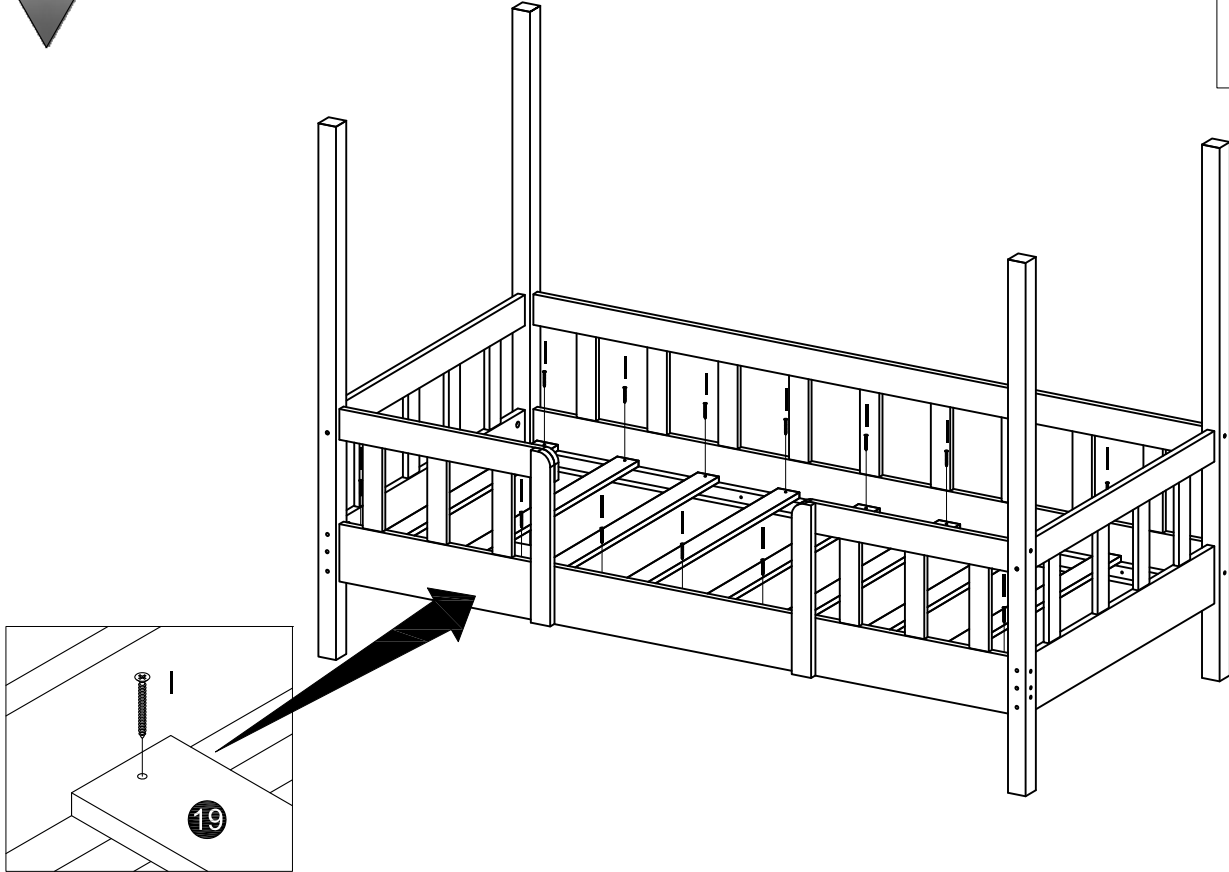


10

D x2






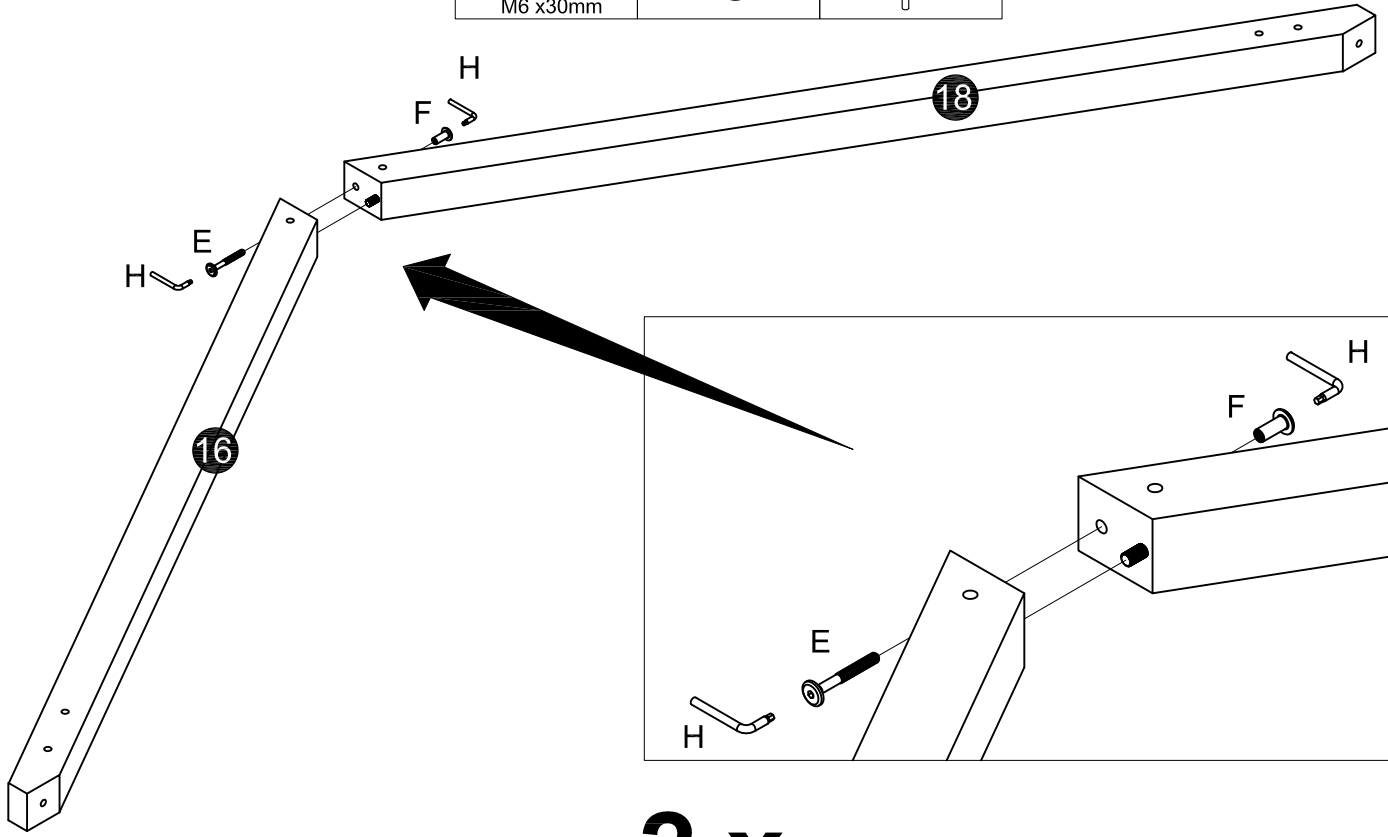
Ø8 x30mm

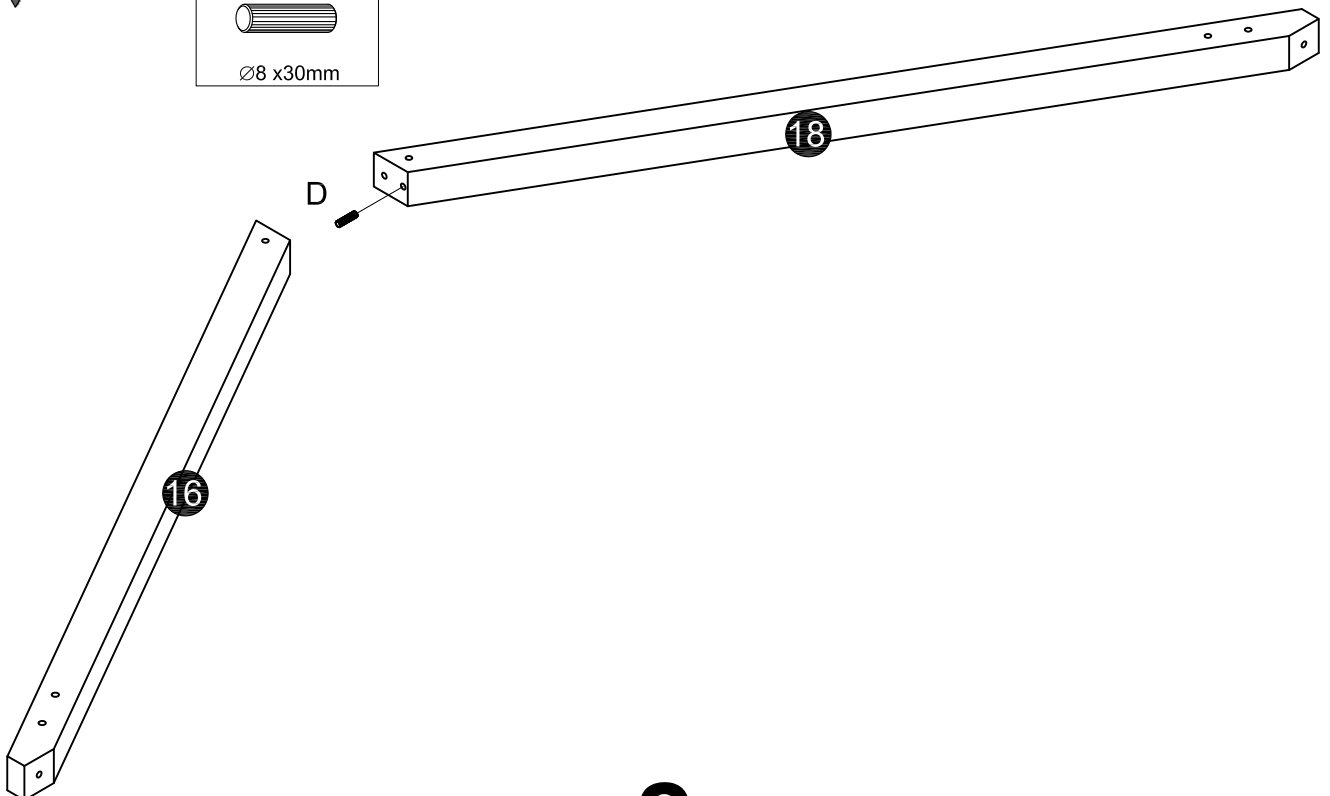

2 x



11


E x2  M6 x30mm	F x2 	H x2 
---	---	--



2 x

12

C x4  Ø6 x90mm	H x1 
---	---

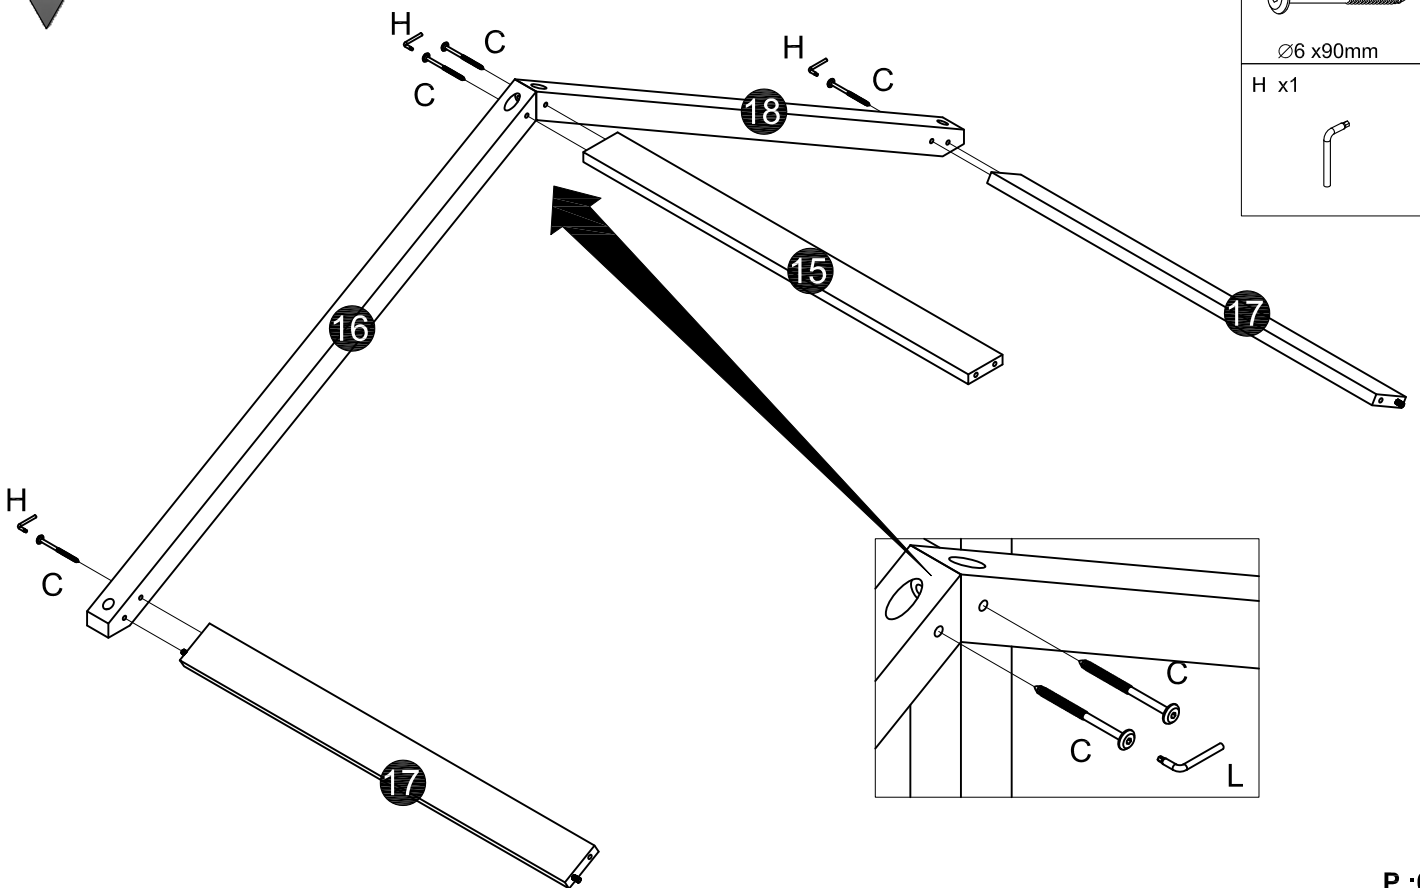

NO HANGING

